LIGHTNING 2 (STANDARD & UL MODELS) PITCHING INSTRUCTIONS




Congratulations on the purchase of you new Sierra Designs tent! In order to familiarize yourself with your new tent, we recommend you "test pitch" it before embarking on your wilderness adventure.

PACKAGE INCLUDES: Tent body with attached Rain Fly, 1 Hubbed Pole, Guy Cords, Stakes, 1 Pole/Stake Sack.

STEP 1: Find an even piece of ground; be sure area is clear of debris. Layout your tent as shown. Stake the 4 corners (circled).



STEP 3: Insert pole tips into the grommets located at the four corners of the tent.

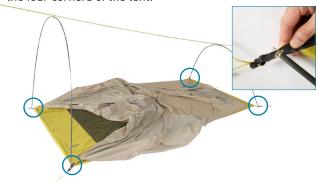

STEP 5: Attach all ultralight clips to the poles. Attach Ball Cap connector on awning to ball end of the ridge pole.



Ball Cap Connector

STEP 2: Assemble pole. Lay it on the tent as shown with yellow or blue pole down the middle. The long gray pole should be in the front, the short gray pole in the rear. Make sure H-Clip is facing down.



STEP 4: Attach H-Clips on the tent body to buttons on bottom of Swivel Hubs (circled).



STEP 6: Stake out the Gear Closet Wings and your tent is completely set up.



 


VENTILATION/VISIBILITY: Because we have replaced the vestibule with an awning above the door you have the ability to control the visibility and ventilation during a downpour. Simply zip up or zip down the waterproof door for the coverage you desire.





LINELOCS™: All tent and awning stake-out points feature LineLocs™. Lift up on the tab to decrease tension. Pull on the knotted end to increase tension.











GUYING OUT YOUR TENT: Your tent includes 4 guy out points, guylines and stakes. It is good practice to always guy out your tent, but it is absolutely necessary when it's windy.

Tie the end of the guy line to the reflective guy out loop on your tent.

Use the black line tightener to adjust the length of the guy line.

Stake out the end of the guy line loop.







GEAR STORAGE: Your SD tent provides gear storage out of the doorway of the tent with access from inside and outside. We recommend inserting your pack into the Gear Closet from the outside of the tent by loosening the LineLoc and sliding your pack under the wings.



